# It's broken - now what?

## Does not go off – NO light!

#### POSSIBILITIES

Broken wire in epee, body cord or reel Blade wire broken at guard socket Contact spring too short Contact spring bent Internal short in epee Body cord wired incorrectly

## Will not pass the weight test!

#### Possibilities

Weak pressure spring Barrel dented or out of round

## Will not pass the shim test!

### Possibilities


Contact Spring is too long


## **Phantom touches**

#### POSSIBILITIES

Intermittent internal short of the wires due to a loose barrel Metallic flake inside the point Loose wires in the guard socket

Inside a Body Cord - all 3 wires must be attached and all wires must correspond to the same connections on the other end.

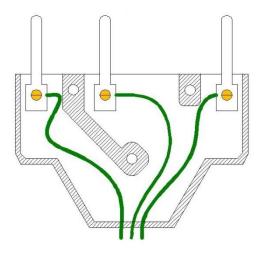

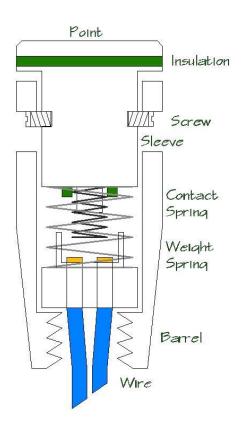

Inside an epee point.